

Assembly Guide



SECURE THE RAILS



STEP 1 Lay out the Full-Bin, shelf panels, and all hardware, then remove the two rails from the bottom panel.



STEP 2 Insert M8 Bolts into the mounting holes that are located in the two channels and loosely tighten.



STEP 3 Lay the bottom panel back down.



STEP 4 Slide the two rails into the channels by threading the bolt heads through the slot on the bottom of the rail.

Make sure the ends of the rails are flush with the ends of the bottom panel.

INSTALL THE BACK MOLLE PANEL



STEP 5 Position the bottom panel at the edge of the table.



STEP 6 Thread the mounting slots on the bottom of the back panel through the M8 flat washers and Nylock nuts running along the backside of the bottom panel.



STEP 7 Firmly tighten all hardware, but leave the corner ends of both rails loose.

INSTALL THE SIDE MOLLE PANELS



STEP 8 Position the bottom panel so its sides are at the edges of the table.



STEP 9 Thread the mounting slots through the M8 flat washers and Nylock nuts.



STEP 10 Firmly tighten all hardware, and repeat for the other side MOLLE panel.



STEP 11 Insert M8 Buttonhead bolts with flat washers through the three mounting holes shown. Firmly tighten the hardware and repeat for the other side MOLLE panel.

INSTALL THE SHELF




STEP 12 Determine the height you want the shelf to be set at using the mounting holes cut into the side MOLLE panels.



STEP 13 Insert M6 bolts, washers and nuts, and loosely install them on both sides of the bin.



STEP 14 Take the shelf and thread the side mounting slots on to the M6 bolts.

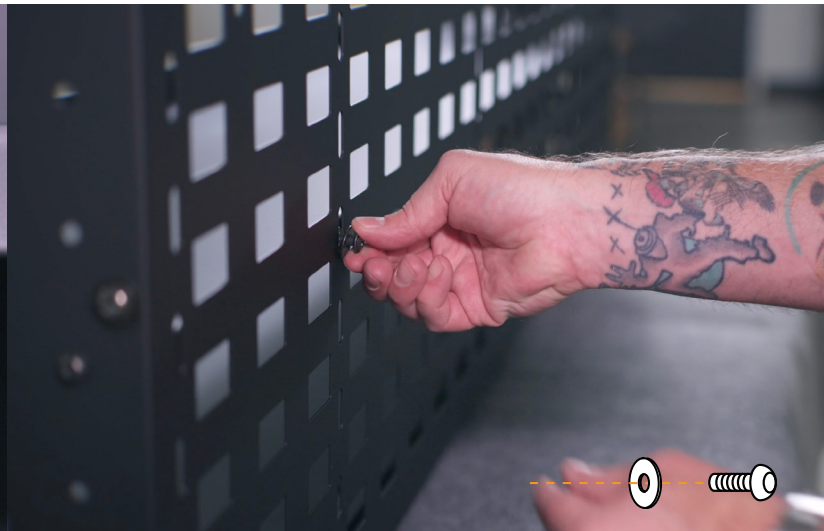

STEP 15 Align the riv nuts on the backside of the shelf with the mounting holes on the back panel. Insert M6 Bolts and flat washers, and loosely tighten.

After Step 15, Firmly tighten all hardware.

INSTALL THE MOLLE FULL-BIN




STEP 16 Locate the Riv Nuts that have been pre installed in to the roof and side stiffener plates on your cap.



STEP 17 Align and loosely install the LONGER M6 bolts, lock washers and flat washers into the ceiling riv nuts.



STEP 18 Then loosely install the SHORTER M6 bolts, lock washers and flat washers into the side stiffer plates.

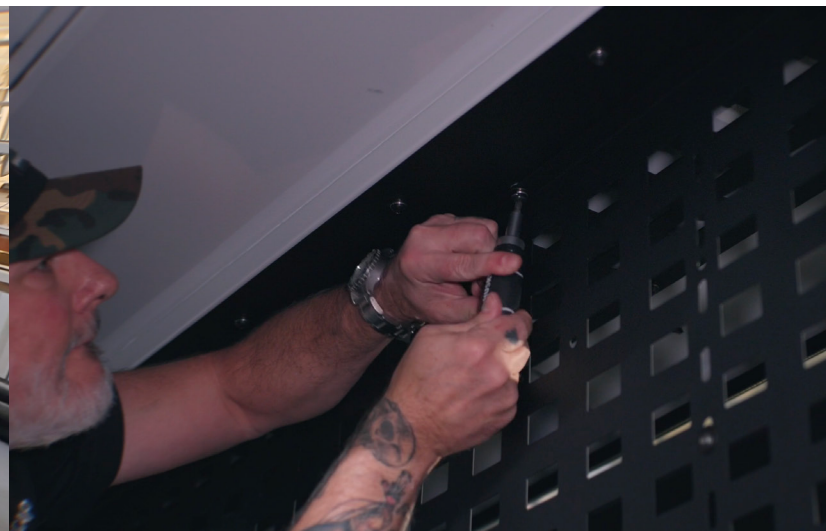

STEP 19 Once installed, firmly tighten all hardware.



**THANKS FOR YOUR PURCHASE. PLEASE LET US
KNOW IF YOU HAVE ANY QUESTIONS.**

[SMARTCAP.COM](https://smartcap.com)

[SUPPORT.NA@SMARTCAP.COM](mailto:support.na@smartcap.com) - NORTH AMERICA

[SUPPORT.SA@SMARTCAP.COM](mailto:support.sa@smartcap.com) - REST OF WORLD